


FIXED FRAME SCREEN

USER MANUAL

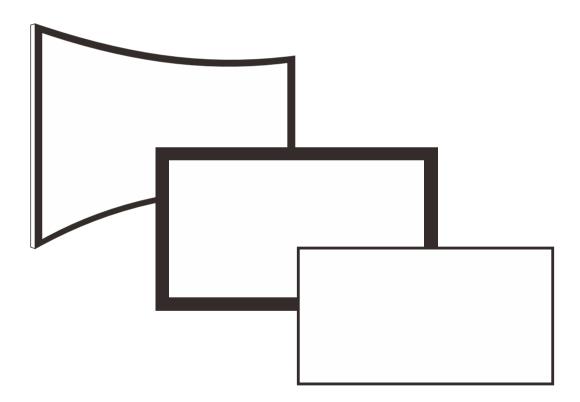

60/90mm CURVED Frame

90mm Frame

60mm Frame

16

Please read this instruction manual carefully before connecting, operating or adjusting this machine. Please keep this manual in a safe place for future reference.

Actual product may vary from image shown. Product specifications subject to change without notice.

CONTENT

	Guidance	02-03
	Suggested Projector Placement	
	Screen Care	03
	7mm Frame	04-13
	Parts List [A]	
	Parts List [B]	
	Inner Frame Assembly	
	Black Backer Attachment	
	Fabric Attachment	
	Outer Frame Assembly	
	Wall Installation	
	50mm Frame	14-21
	Parts List	
	Frame Assembly	17
	Fabric Attachment	18
	Black Backer Attachment	19
	Support Bar Installation	20
	Wall Installation	21
9	90mm Frame	15-21
	Parts List	15
	Frame Assembly	17
	Fabric Attachment	
	Black Backer Attachment	19
	Support Bar Installation	20
	Wall Installation	21
	50/00mm CUDVED Erama	16 21
	60/90mm CURVED Frame	16-21
	Parts List	16
		16
	Parts List	16
	Parts List Frame Assembly	16 17
	Parts List Frame Assembly Fabric Attachment	

TO THE OWNER

Thank you for purchasing our Fixed Frame screen.




Please take a moment to read this manual carefully before assembly and installation.


DIRECTIONS

- 1) Due to the batch divergence, please refer to the actual product configuration.
- 2) The indication is for reference only, and the actual size is subject to the actual product.
- 3) Wear gloves when handling the material. Carefully unroll the screen material out onto a clean floor. Take care to not bend or crease the screen material.
- 4) It is strongly recommended that the screws be screwed into the wall studs where possible. If the wall studs cannot be used, wall anchors must be used.
- 5) Select a location that is not susceptible to moisture, dust, and is away from high traffic locations.
- 6)Please note accessories will be slightly different because of the different fabrics.

GUIDANCE

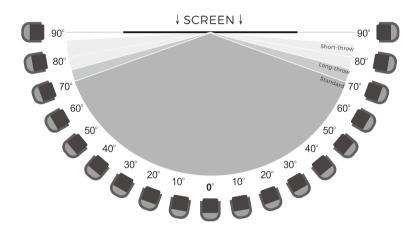

Short-throw screen user, please pay attention to the direction of the screen. The screen will change according to the installation position of the projector. The recommended viewing distance is more than 2m

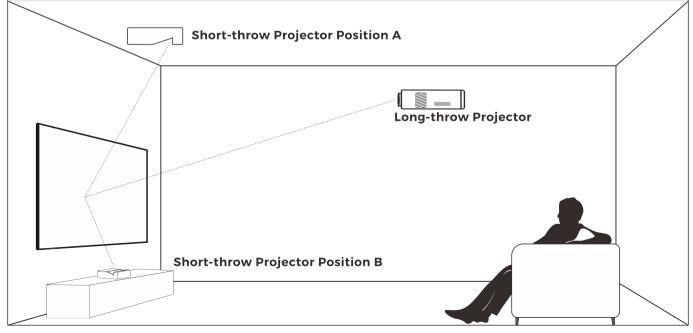

SCREEN CARE



Avoid sharp objects from directly touching the screen surface.

Avoid scratching the screen surface, which will cause irreparable damage.

Do not touch the screen surface directly with your hand, skin grease will cause damage to the screen coating.

If involved with acetone, benzene, alcohol, etc., please consult your dealer first



Short-throw Fabric:

For general dust, use a soft brush to clean the screen surface.

Use a soft cloth to dip with mild soapy liquid or neutral detergent.

Rough objects or clothes may damage the screen surface.

The screen surface has optical textures, please wipe the horizontal direction when cleaning the fabric; do not wipe it vertical direction or revolve.

Wet cleaning: with a soft towel moistened with water or diluted detergent (Do not use alcohol). Compressed gas duster is recommended.



Acoustically Transparent Fabric:

Compressed gas duster is recommended.

Dust off the screen with a dry rag. Do not use wet cloth, detergent, etc. to wipe the dust on the curtain surface.



Long-throw Fabric:

The surface can be cleaned as follows:

- 1. Using a white clean cloth(100% cotton preferred) and dampened with clear water, gently wipe the area in one direction. Do not use a circulate motion. Using a fry 100% cotton cloth, wipe dry after each cleaning and before folding and storing.
- 2. To clean a stubborn stain or sticky surface, use denatured alcohol(methanol or methyl alcohol) following the same procedure as for water.

 OR.



- 1. Lint-free white cloths, Mild Soap (hand soap is suitable), and water.
- 2. Take the Lint-Free cloth and submerge it in warm water for cleaning light dust and dirt. For stubborn stains or a sticky surface, a solution of mild dishwashing liquid diluted with warm water should be used.
- 3. Completely ring out the cloth so it is lightly dampened, and not drenched.
- 4. Using the damp cloth, lightly wipe in an up-and-down motion starting at the left of the screen and moving to the right of the

screen. DO NOT WIPE IN CIRCULAR MOTION.


5. Once you have completed wiping the entire screen with a dampened Lint-Free cloth, use the dry Lint-Free cloth to wipe off any excess water from the screen.




Standard Fabric:

Using a white clean cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. Do not use a circular motion. Using a dry 100% cotton cloth, wipe dry after each cleaning session. To clean a stubborn stain or a sticky surface, use denatured alcohol (methanol or methyl alcohol) following the same procedure as for water.




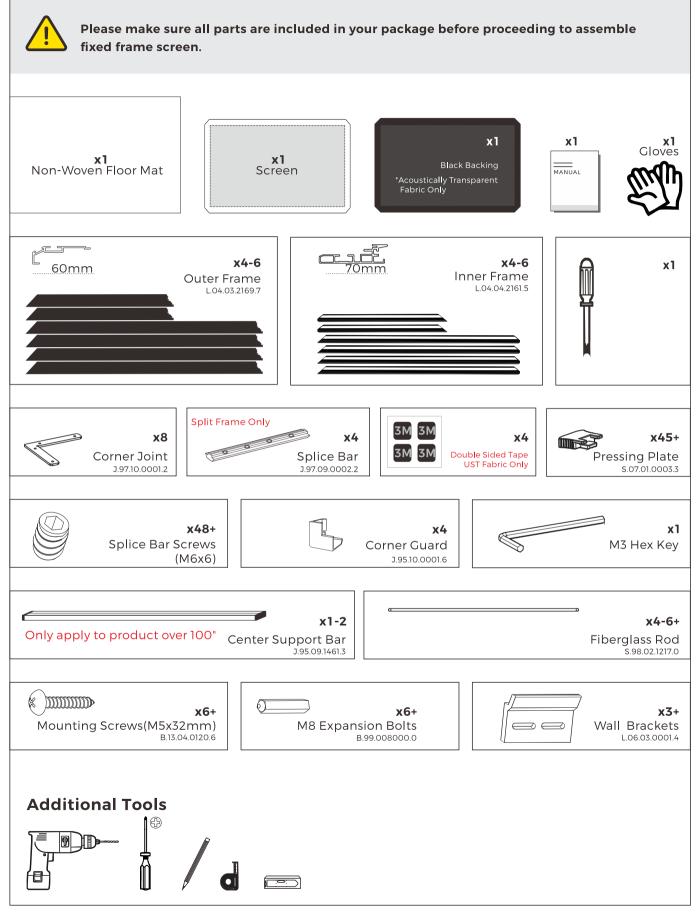




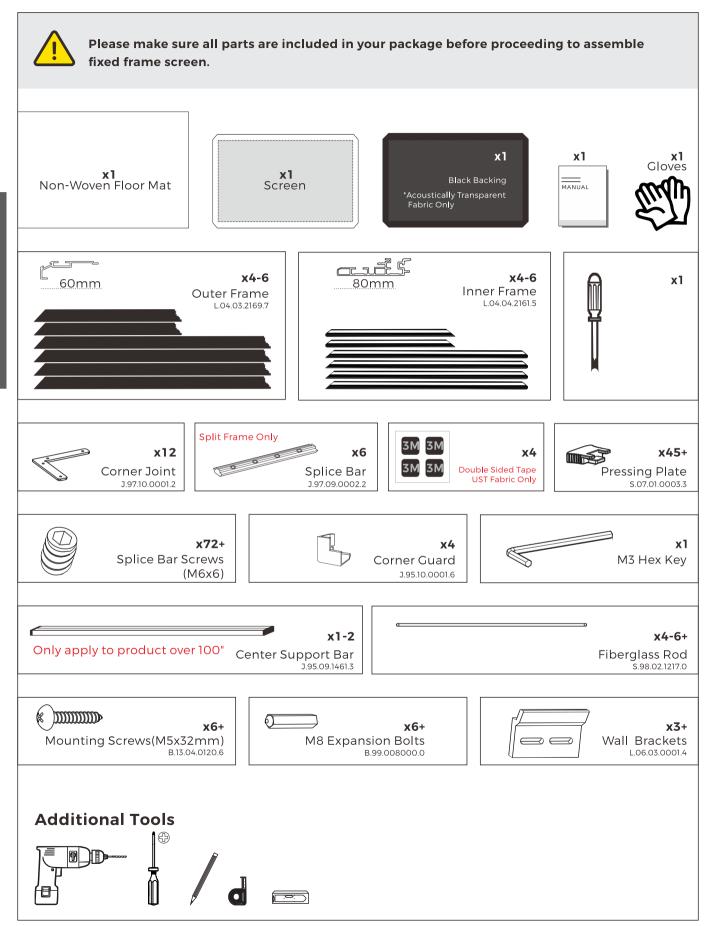

INSTALLATION

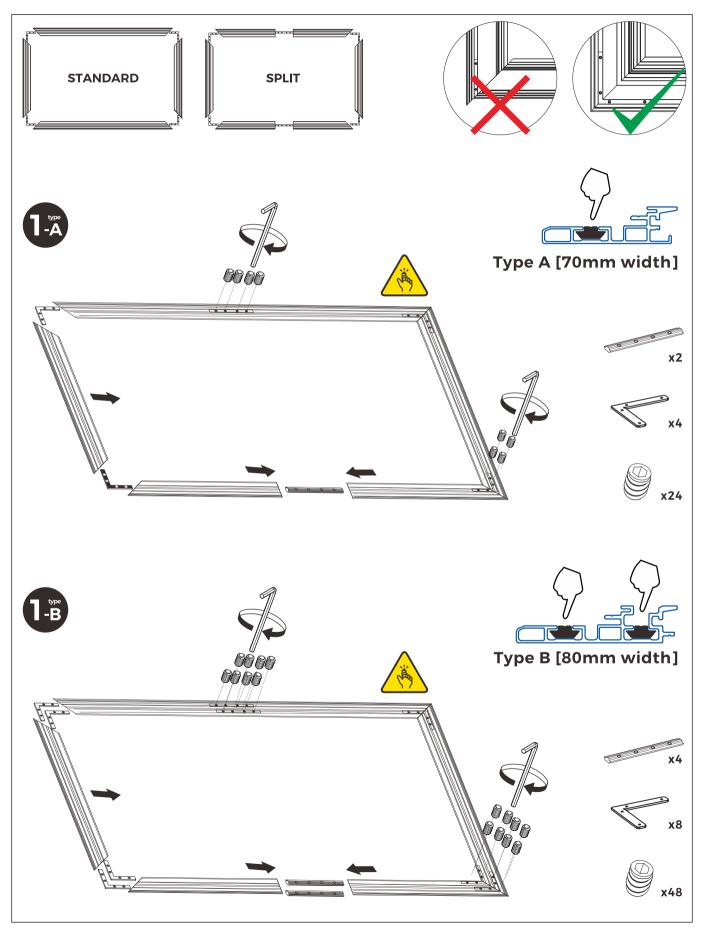


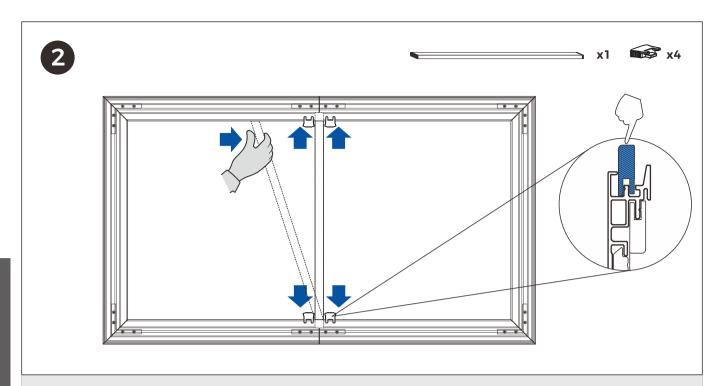

BLACK BACKER ATTACHMENT



Acoustically Transparent materials come with a black backer that must be installed to eliminate shine through. Attach the light-absorbing black velvet fabric onto the Hook(frame)

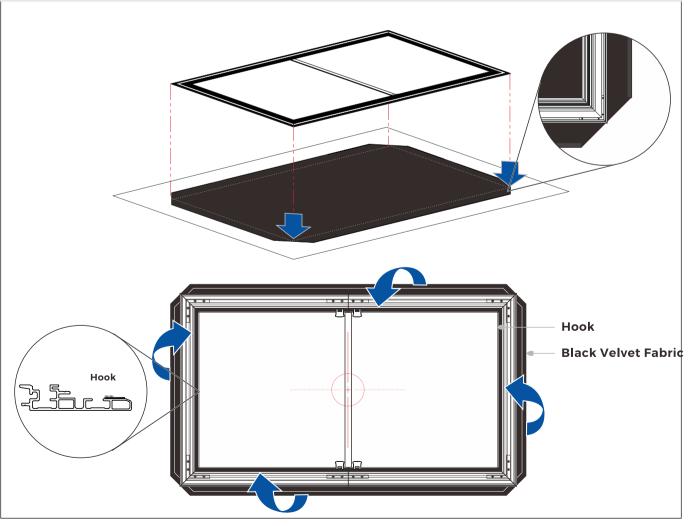


FABRIC ATTACHMENT



Wear gloves when handling material. Take care to not bend or crease the screen material. Carefully unroll the screen material out onto a clean floor.



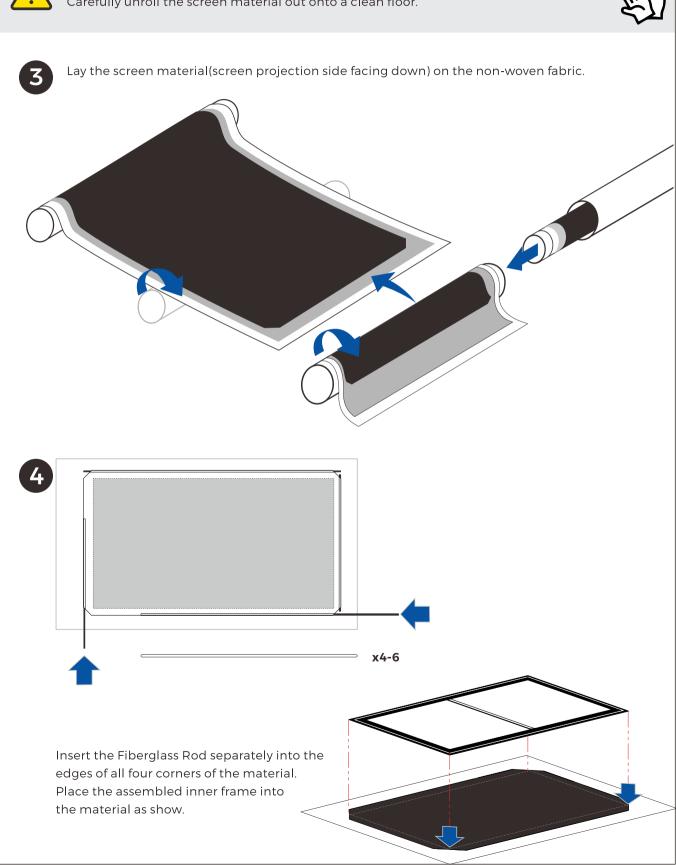





After all four corners have been attached; please check whether the screen surface is flat. If not, please loosen the pressing plate and pull the fabric tighter.





Stretch the Fiberglass Rod in the direction of the arrowhead, then use the Pressing Plate fix screen material in each frame corner $(1 \rightarrow 2 \rightarrow 3 \rightarrow 4)$.




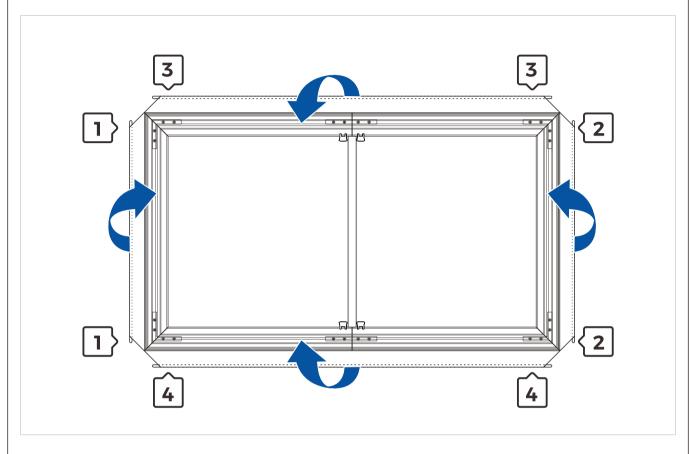

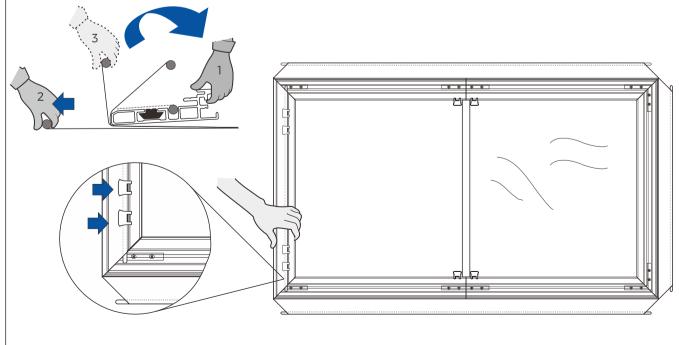

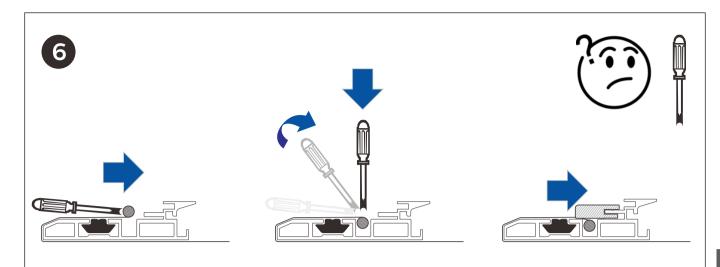

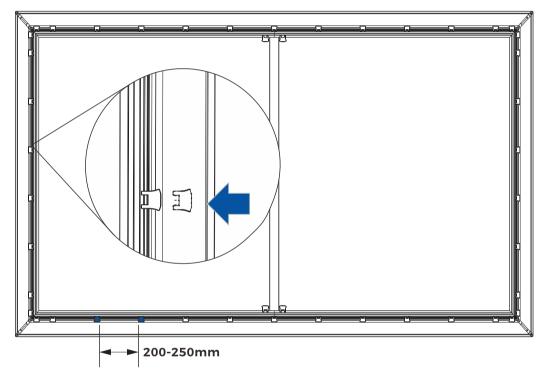

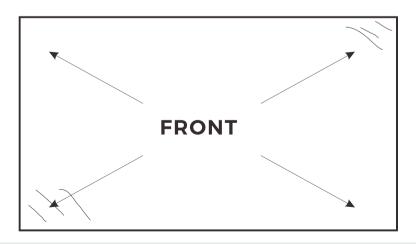




After the curtain is fixed, check whether the surface (corner) of the curtain is smooth from the front. If there are wrinkles, remove the corresponding corner pressure plate, tighten the curtain again, and fix the pressure plate.

UST Fabric



UST ALR materials comes with Double Sided Tapes that must be installed on the material corner(straps) to prevent wrinkles. Stick the straps onto the frame along the direction of the corner joing .

There are also has labels on the screen material to help distinguish the correct direction.

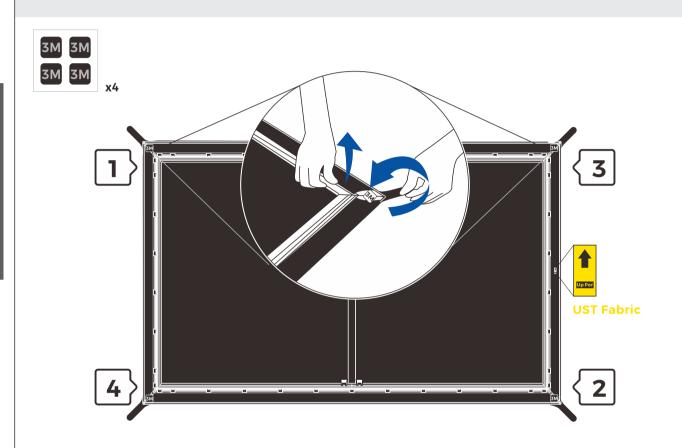









Flip the screen to the front, make sure the screen material is flat.

If Not, take down the Pressing Plate, stretch the screen material corner, and reattach.

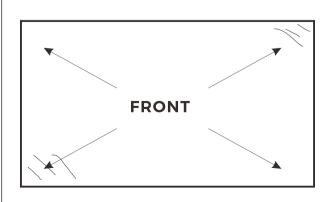

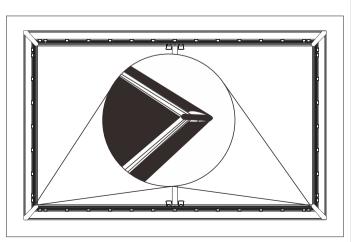

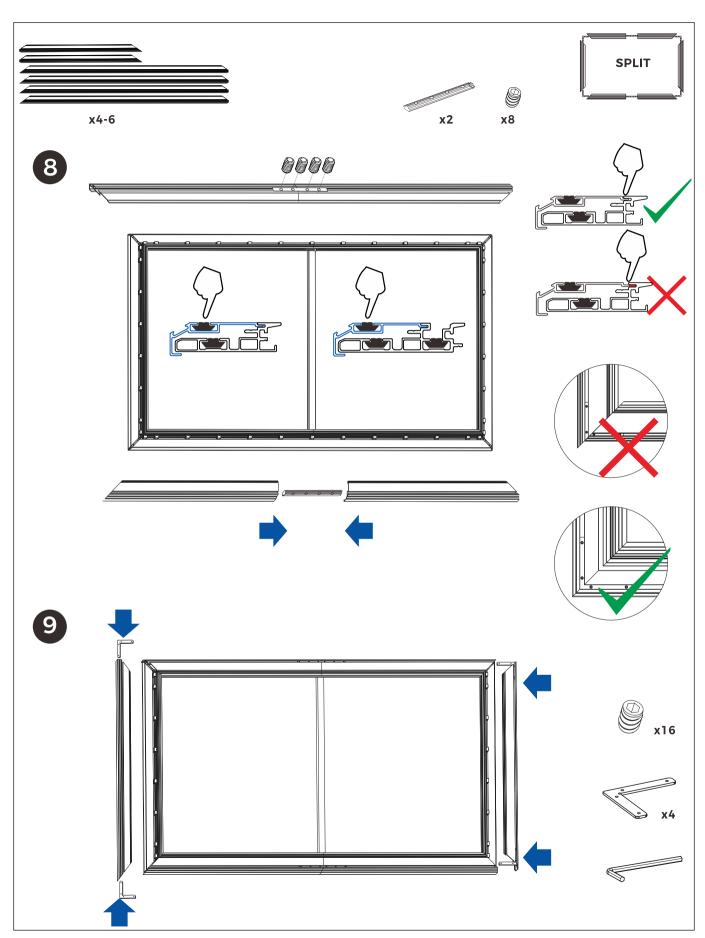


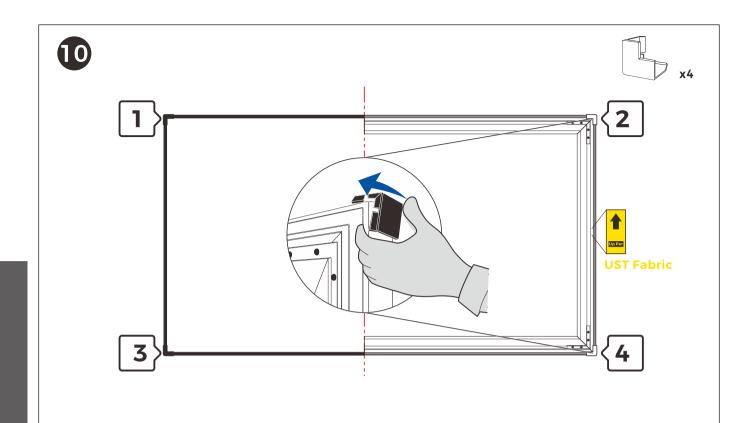





WALL INSTALLATION

Please distinguish the correct direction before attaching the Short-throw fabric screen to the wall.

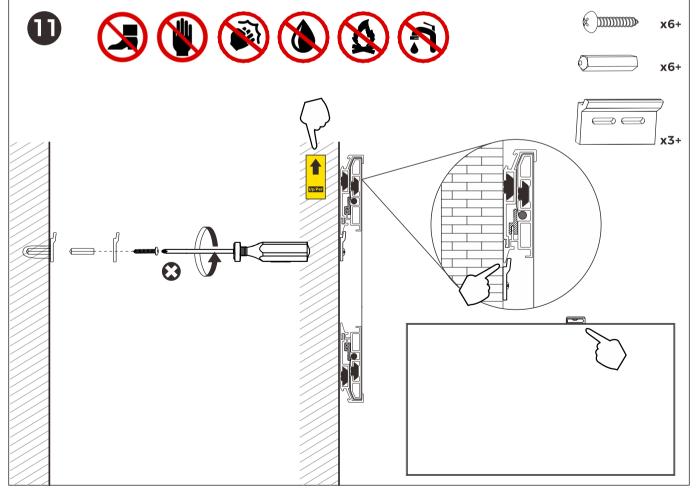

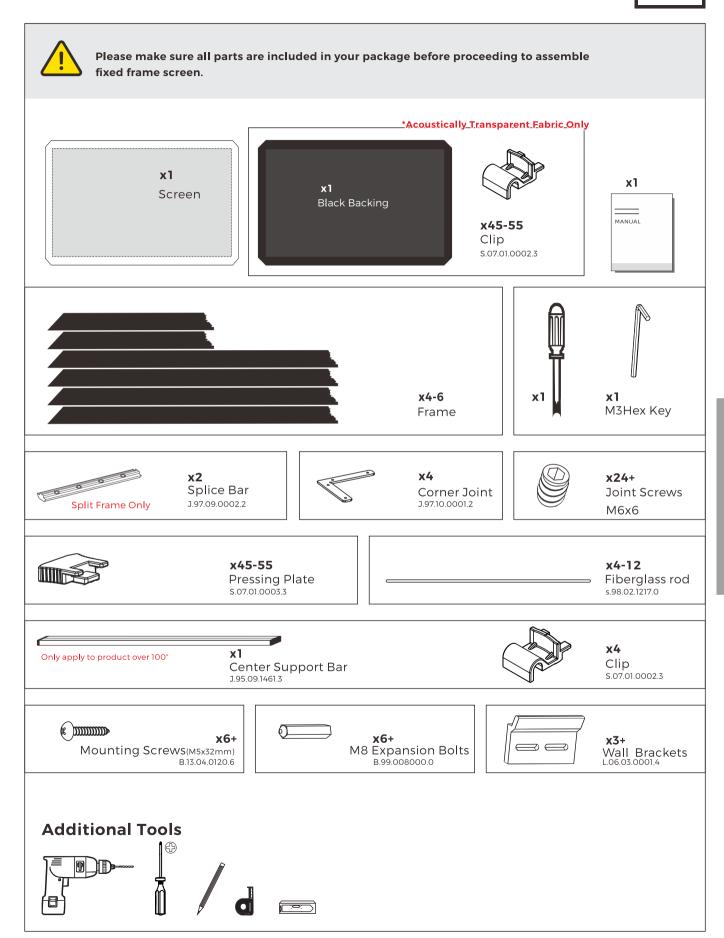





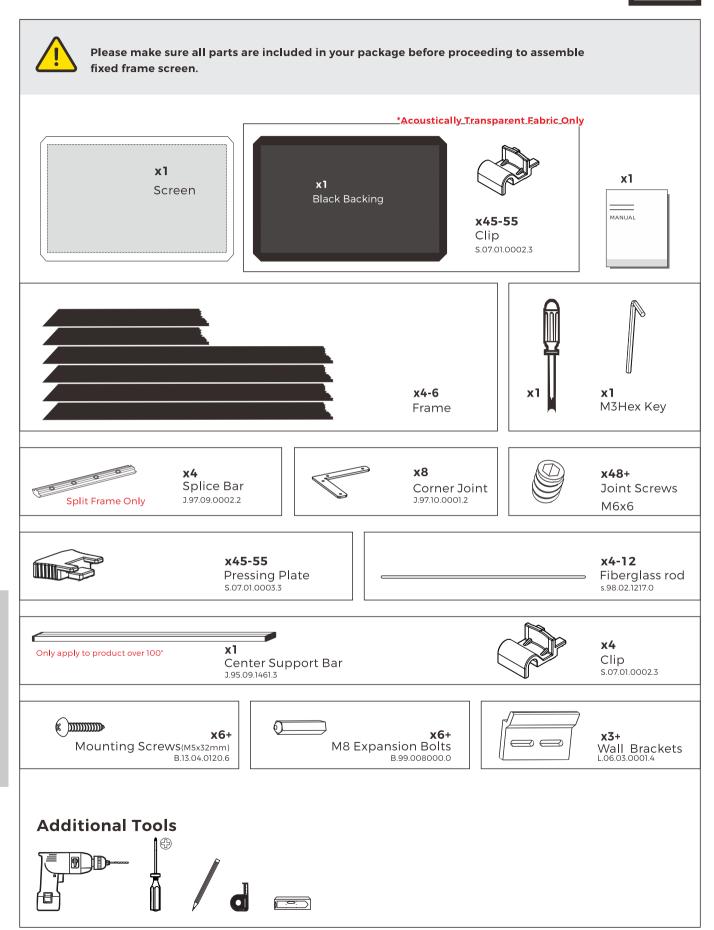

60/90mm CURVED Frame



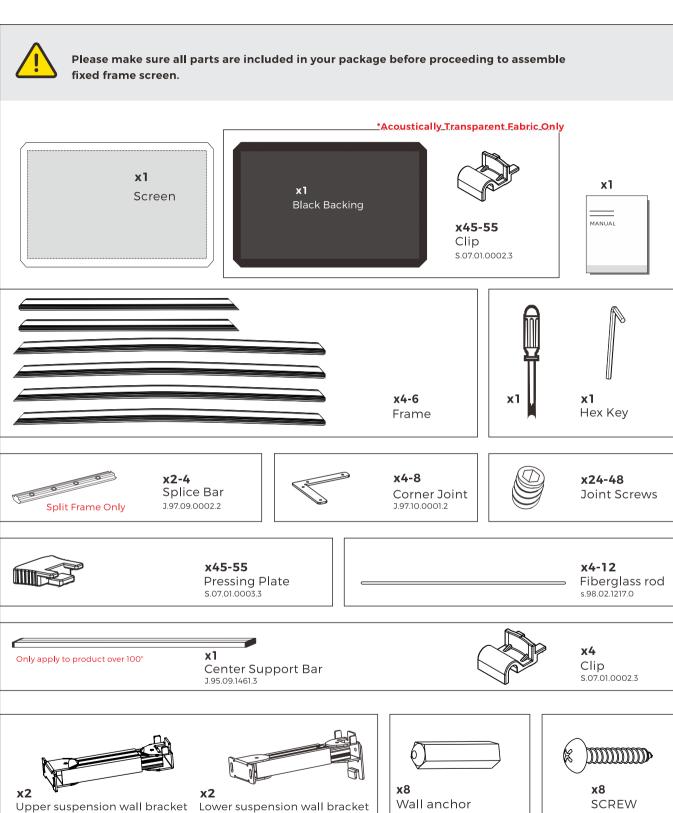


 





B.99.008000.0


B.33.050300.6

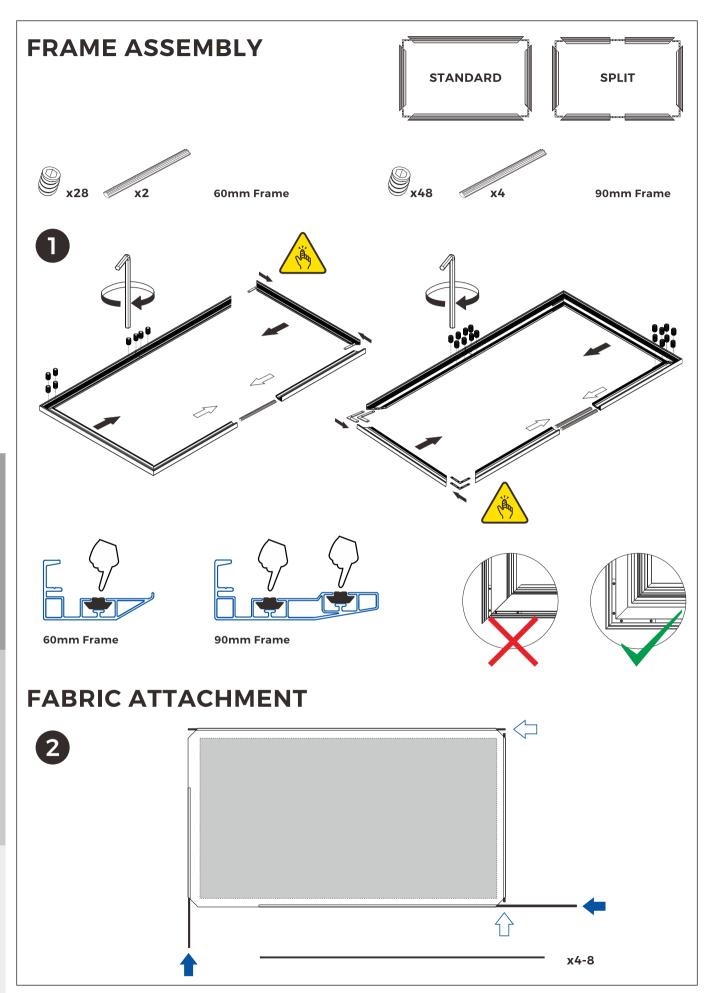

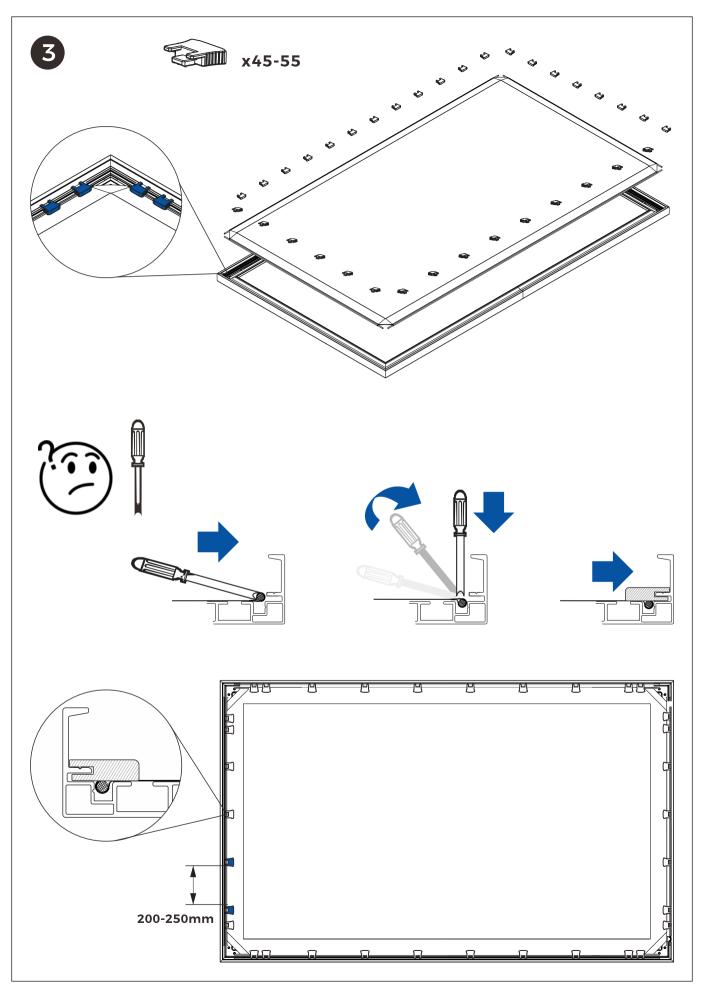

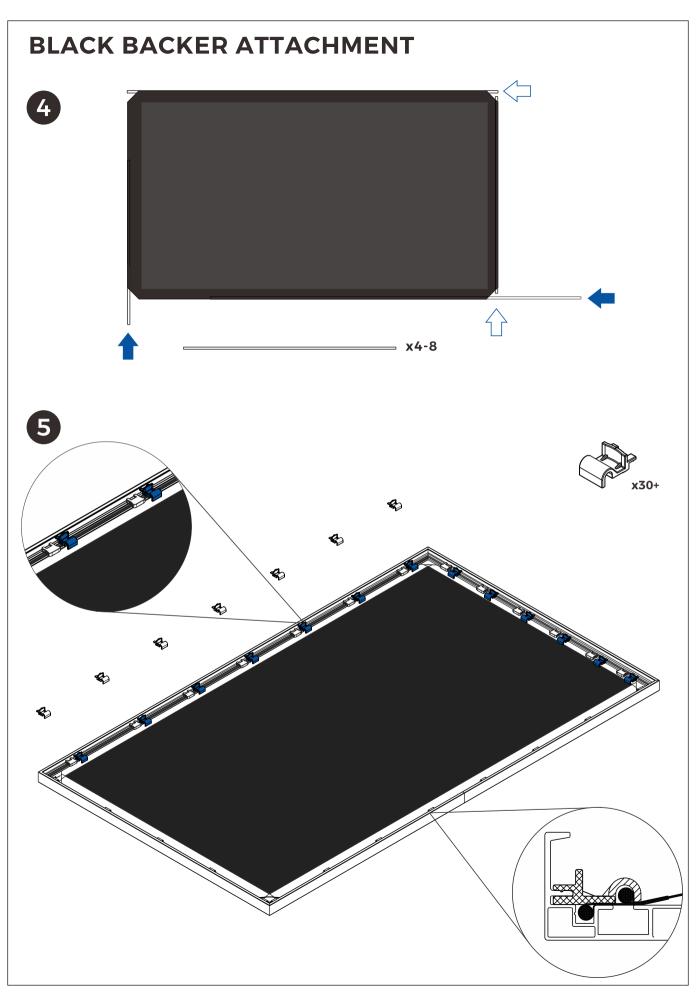


SUPPORT BAR INSTALLATION

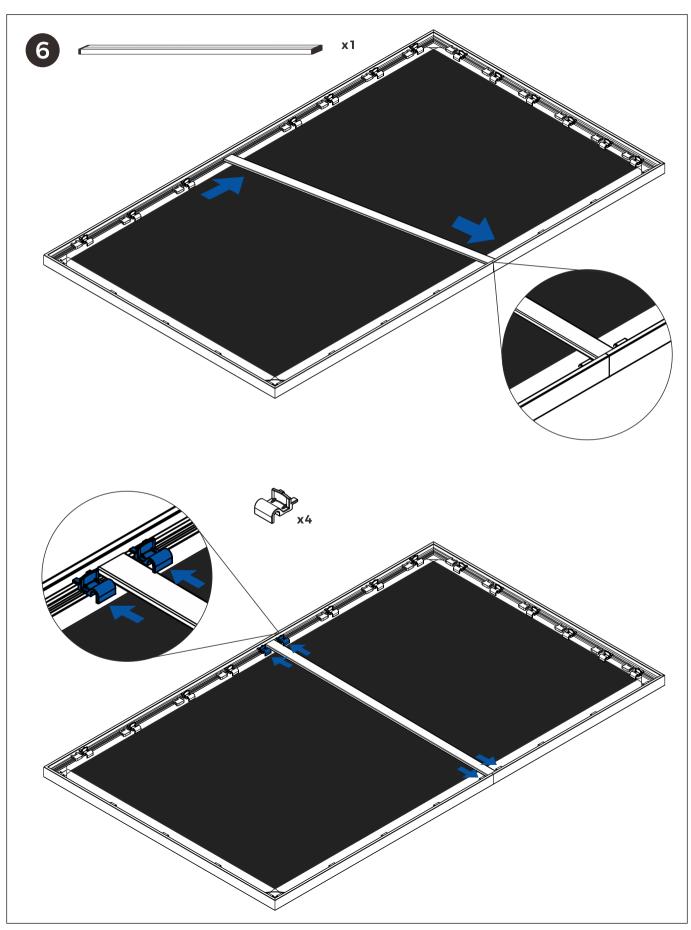

WALL INSTALLATION



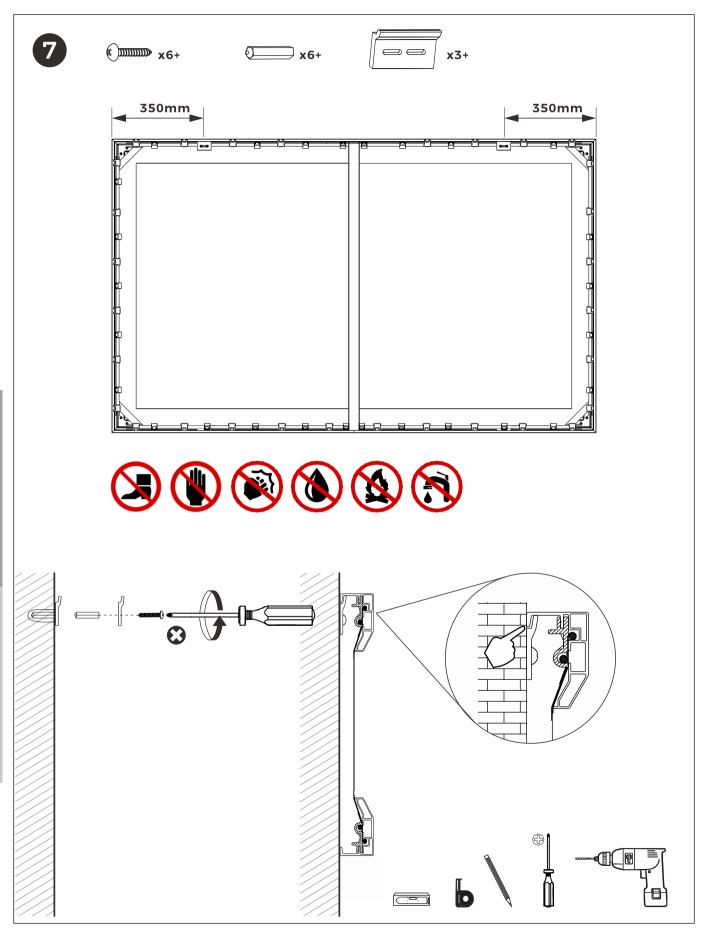

WALL INSTALLATION



